


MEASURE LOCATION OF CUTOUT ON THE WALL AND TRANSFER DIMENSIONS TO THE BACK OF THE WALL PANEL.


REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

BACK OF PANEL

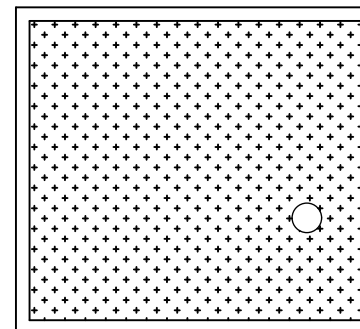


USING A SHARP UTILITY KNIFE, CUT OUT FIBERGLASS, CAREFUL NOT TO CUT THE FABRIC.

BACK OF PANEL

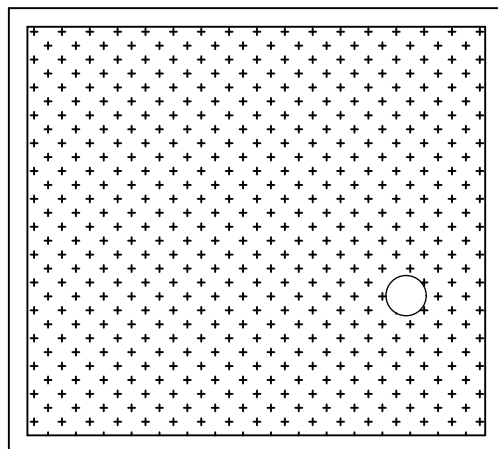

TURN PANEL OVER AND MAKE 2 SLITS IN FABRIC AT HOLE LOCATION AS SHOWN ABOVE.

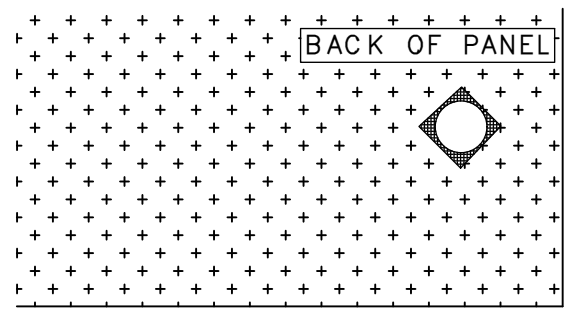

TURN PANEL OVER AND GLUE THE FABRIC FLAPS TO THE BACK OF THE PANEL. IF FABRIC DOES NOT REACH THRU THE HOLE TO THE PANEL BACK, FABRIC MAY BE GLUED TO THE INSIDE OF THE HOLE.



ABSORPTION PLUS PANEL  
IMPACT PANEL

CIRCULAR HOLE CUTOUTS

FEB. 16, 2012	SIZE A	FSCM NO.	DWG NO. 20000369	REV
	SCALE N/A	DRWN ZCH	SHEET 1 OF 1	