


ALL PANELS UNDER 48" TALL WILL HAVE 4 Z-CLIPS. PANELS OVER 48" TALL WILL HAVE 6 Z-CLIPS. MIDDLE ROW CLIPS WILL BE CENTERED ON THE PANEL.

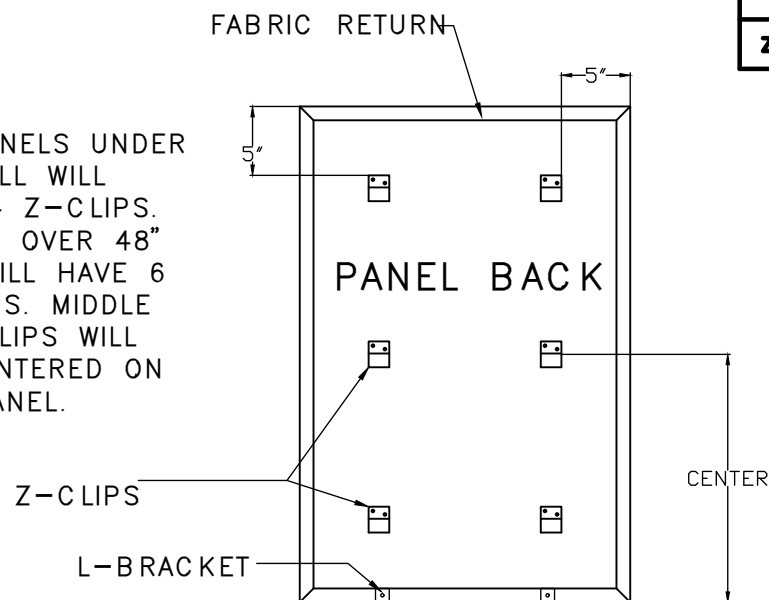

### Z-CLIP PLACEMENT


PLACE AND SECURE L-BRACKETS TO SUPPORT PANEL WHEN RESTING ON Z-CLIPS.

SLIDE PANEL DOWN ONTO CLIPS UNTIL FIRMLY SEATED. ONCE PANEL IS LOCATED PROPERLY, LOCK PANEL IN PLACE BY PUTTING A SCREW UP THROUGH EACH "L" BRACKET INTO THE HARDENED BOTTOM EDGE OF THE PANEL.


DO NOT OVERTIGHTEN SCREWS TO PREVENT STRIPPING.

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

### PANEL TOP

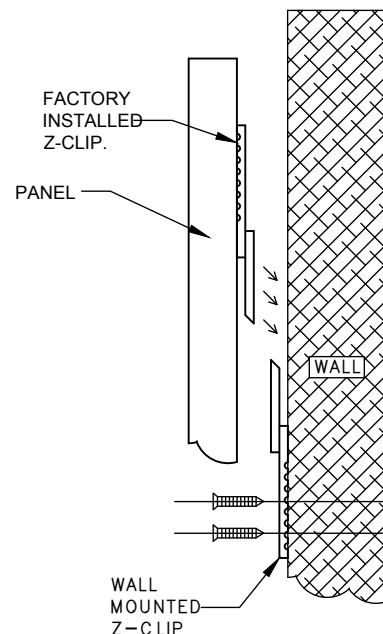

### PANEL BOTTOM

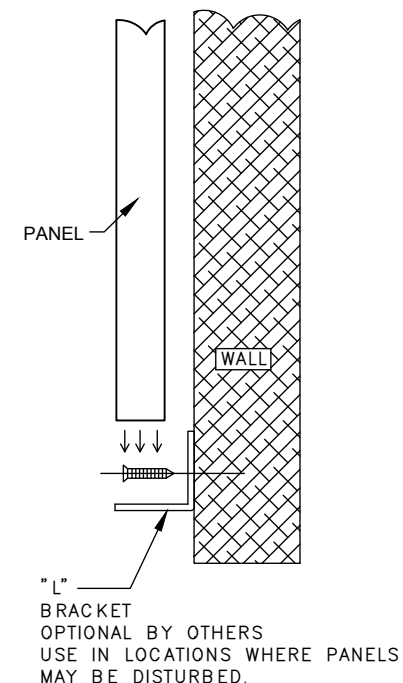

LOCATE Z-CLIPS ON WALL PER Z-CLIP POSITION ON PANEL BACK.  
SECURE Z-CLIPS TO WALL WITH (2) SCREWS (BY OTHERS)



## ABSORPTION PLUS PANEL IMPACT AND TACK PANEL

### INSTALLATION INSTRUCTIONS WITH Z-CLIP AND OPTIONAL L-BRACKET

NOV. 08, 2013	SIZE A	FSCM NO.	DWG NO. 20000358	REV 5
	SCALE	N/A	DRWN ZCH	SHEET 1 OF 1