




### PANEL FABRIC DOWN

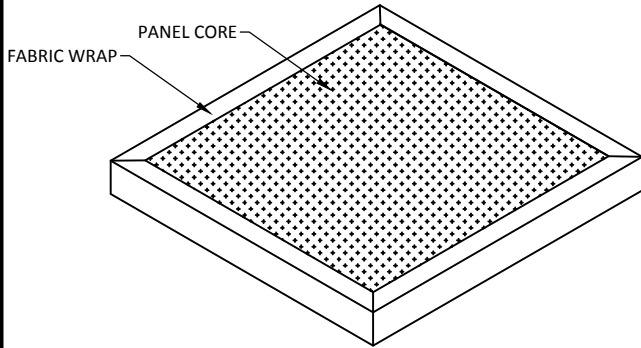


#### INSTRUCTIONS

1. PEEL FABRIC BACK PAST DESIRED CUT LINE (USE HEAT GUN TO SOFTEN FABRIC ADHESIVE).

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

**NOTE**  
ALL WORK TO BE DONE ON CLEAN, SMOOTH SURFACE.


### PANEL FABRIC UP

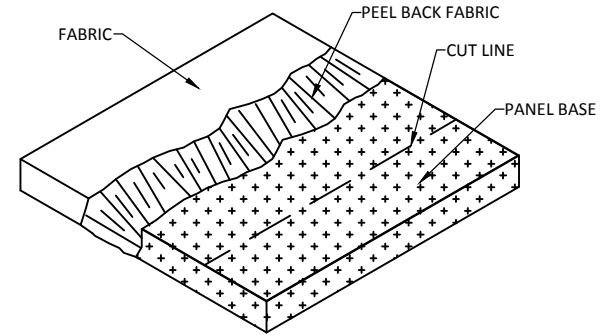

#### INSTRUCTIONS

2. CUT PANEL, WITH FABRIC FACE UP, USE A STRAIGHT EDGE AND RAZOR KNIFE. (BE CAREFUL NOT TO CUT FABRIC)


### PANEL FABRIC UP

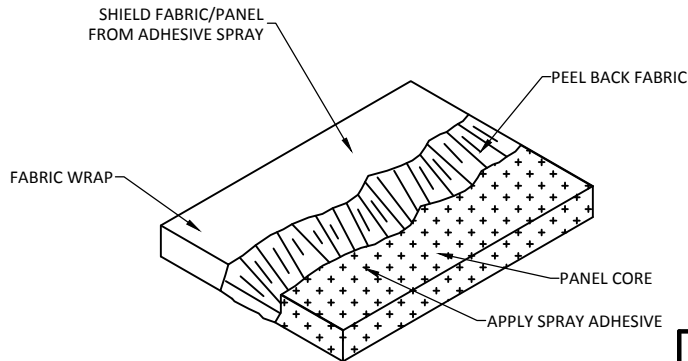

#### INSTRUCTIONS

3. APPLY ADHESIVE TO EXPOSED BASE AND REWRAP FABRIC. (FIELD APPLICATIONS REQUIRE 1" MINIMUM FABRIC RETURN TO BACK OF PANEL)

### PANEL FABRIC DOWN

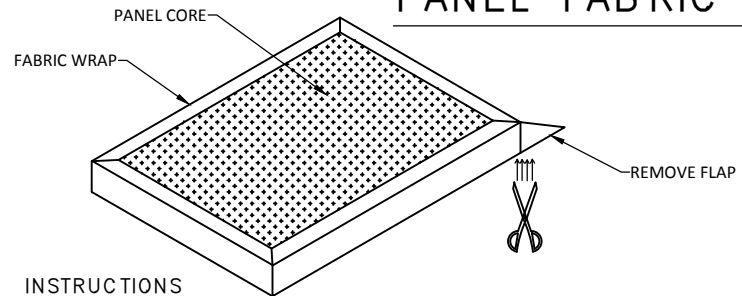

#### INSTRUCTIONS

4. PINCH EXCESS FABRIC TOGETHER AT PANEL CORNERS AND CAREFULLY TRIM EXCESS FABRIC.



ABSORPTION PLUS PANEL  
IMPACT PANEL

FIELD CUT PANELS

FEB. 16, 2012		SIZE A	FSCM NO.	DWG NO. 20000368	REV 1
SCALE N/A		DRWN ZCH		SHEET 1 OF 1	

