



MEASURE LOCATION OF CUTOUT ON THE WALL AND TRANSFER DIMENSIONS TO THE BACK OF THE WALL PANEL.

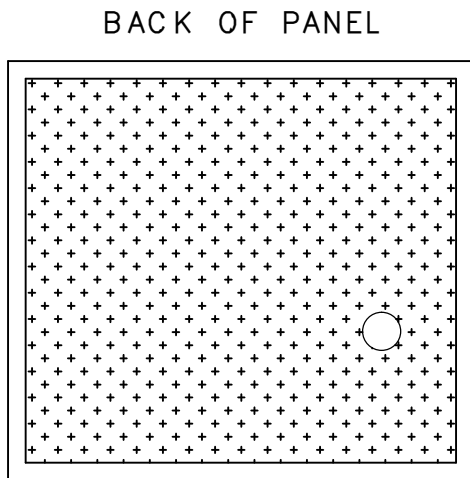


TURN PANEL OVER AND MAKE 2 SLITS IN FABRIC AT HOLE LOCATION AS SHOWN ABOVE.


REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

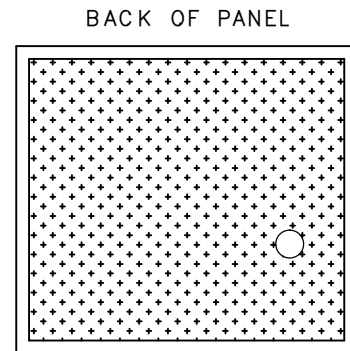

USING A SHARP UTILITY KNIFE, CUT OUT FIBERGLASS, CAREFUL NOT TO CUT THE FABRIC.

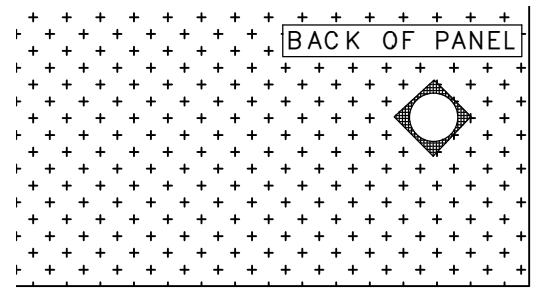

TURN PANEL OVER AND GLUE THE FABRIC FLAPS TO THE BACK OF THE PANEL. IF FABRIC DOES NOT REACH THRU THE HOLE TO THE PANEL BACK, FABRIC MAY BE GLUED TO THE INSIDE OF THE HOLE.

		ABSORPTION PLUS PANEL		
		IMPACT PANEL		
		CIRCULAR HOLE CUTOUTS		
	SIZE A	FSCM NO.	DWG NO. 20000369	REV
FEB. 16, 2012		SCALE N/A	DRWN ZCH	SHEET 1 OF 1